


DOWNHILL ASSIST CONTROL SWITCH

COMPONENTS

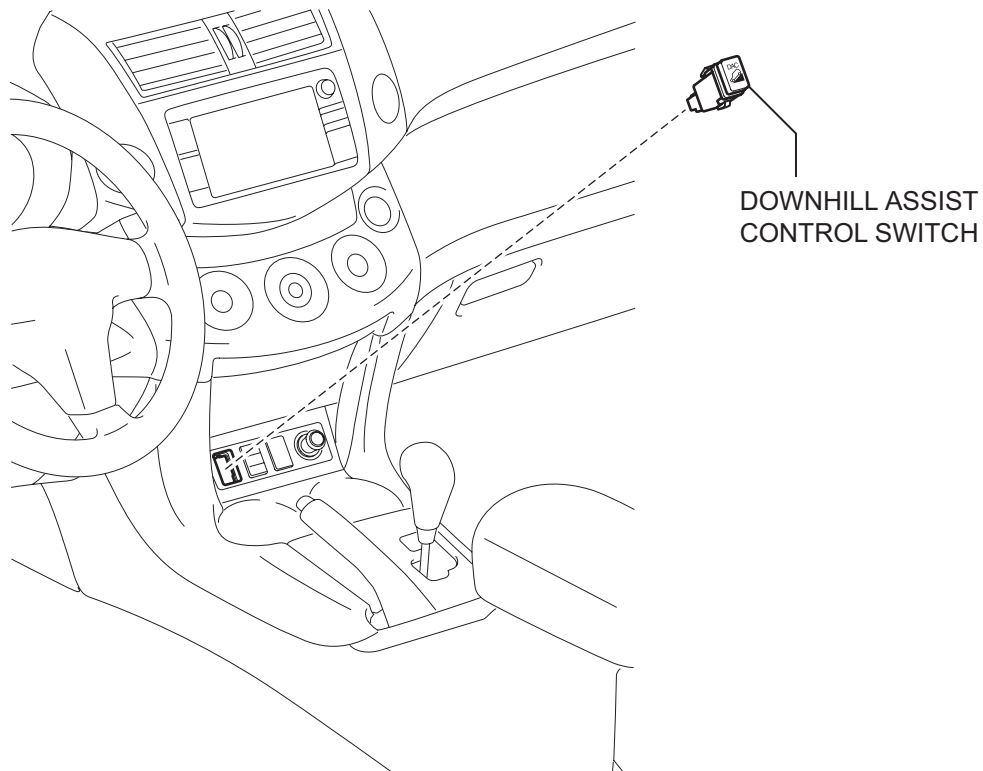


T

C129079E01

BC

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
 CAUTION:
 Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
2. REMOVE DOWNHILL ASSIST CONTROL SWITCH
 (a) Detach the 2 claws and remove the switch.

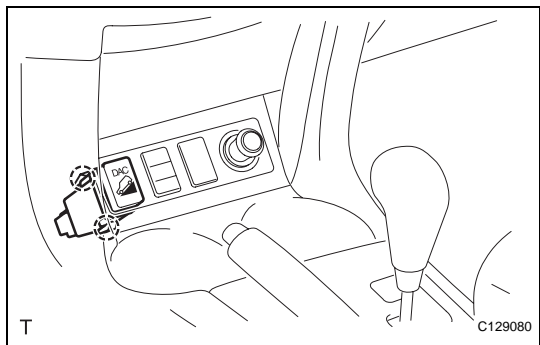

INSPECTION

1. CHECK DOWNHILL ASSIST CONTROL SWITCH
 (a) Measure the resistance of the switch.
 Standard resistance

Tester Connection	Switch Condition	Specified Condition
1 - 4	Released	10 kΩ or higher
1 - 4	Pushed in	Below 25 Ω

- If the result is not as specified, replace the switch.
- (b) Check illumination operation.
 (1) Connect the battery's positive (+) lead to terminal 3 and negative (-) lead to terminal 2. Then check that the bulb illuminates.

OK:
 Bulb illuminates.

If the result is not as specified, replace the switch.

INSTALLATION

1. INSTALL DOWNHILL ASSIST CONTROL SWITCH
 (a) Attach the 2 claws to install the switch.
2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

